

BS-98 Fingerprint Keypad Door Lock

Functional Operation

1. Unlocking Operation

- 1) Opening door with password: directly input the correct 8-digit password to open the door;
- 2) Opening door with fingerprint: put finger in the correct position when the blue background light of the fingerprint collection window is on, to open the door if the fingerprint is verified successfully.

2. Adding Password User

Press "1+*" + master code + 3-digit user number + user password + user password + "#"

For instance: to add user 111 and initial password 12312301, the following operation shall be conducted:

For instance: "1+*" + master code + "111" + "12312301" + "12312301" + "#"

3. Deleting Password User

- 1) Deleting with user number: press "2+*" + master code + 3-digit user number + 3-digit user number + "#"
- 2) Deleting all sub-codes: press "3+*" + master code + "#"

4. Modifying Password (Sub-code, Master code)

Press "0+*" + modified password + new password + new password + "#"

5. Enabling Passage Function Press "*+*" + master code + "#"

6. Disabling Passage Function Press "*+*" + master code + "#"

7. 1) Adding Fingerprint User with User Number

Press "1+#" + master code + "3-digit user number" + "#" + fingerprint + "Dee——"
(to input the next user number)

2) Adding fingerprint randomly

Press "1+#" + master code + "#" + fingerprint + "Dee——" (to input the next fingerprint)

8. 1) Deleting Individual Fingerprint User with User Number

Press "2+#" + master code + "3-digit user number" + "3-digit user number" + "#"

Directly delete fingerprint with finger: press "2+#" + master code + "#" + fingerprint

9. Deleting All Fingerprint Users Press "3+#" + master code + "#"

Note: 1) Remove the front cover: When the blue background light of the fingerprint collection window is not on, repeat the operation till the light becomes on

2) When adding a user, do remember the user number for future management and deletion of the user

3) Sound directions: "Dee-" is the sound for pressing numbers; "Dee-Dee-Dee-" refers to failure of operation; "Dee-Dee-Dee-Dee-" after door opening music refers to low voltage; "Dee——" refers to other successful operation.

4) Resetting: Remove the front cover, and the rear cover with some special tool; remove the power cord, and use some metal to make a short circuit between the anode and cathode of the power cord (or wait for a while); keep pressing the buttons "1 and 2", and connect the power cord; wait for a lasting sound "Dee——", which mean operation succeeds.

5) In the passage state, remove the front cover, and open the door when the blue background light of the fingerprint collection window is on.