

# BS-88 Keypad Lock Use Manual

## Read this Manual carefully before operating keypad locks Product Introduction

**Important tips:** 1. Original master password “111111”

2. Password---- 6 digits

1 The keypad lock can save 200 sets passwords

2 Master password is the management password with the highest authority. Through the master password, you can add or delete user setting, open or close the one-key opening function setting.

3 When you hear “di di di di di di” six urgent warning tones from the keypad lock, please change the batteries in time.

4 There is a reset switch on the back. Press this switch to restore the master password into “111111”

If you press this switch continuously for more than 2 seconds & wait for light changed to green, the keypad lock will be restored to the original factory condition, that is to say, restore the master password into “111111” and clear all sub-passwords.

5. Use the mechanical key unlocking: Please rotate the key in clockwise for 3 circles to unlock.

6. Be Sure to use 4 x AA batteries 6V.

7. Please do not use mechanical key to open the lock. It is for emergency use only. If you use your mechanical key to open the lock, Please use the mechanical key to turn The cylinder back to lock position.

8. When you install the lock, please make the spindle into latch under square shape. Not Diamond shape.

## Functions Operation

1. Opening operation

Directly input 6 digits correct password. If the password is correct, the green light will turn on. Open it normally within 5 seconds.

2. Add users

Press “##” + master password + “\*\*\*”+ 3 digits user number + user password+ user password

e. g. If adding user 5 and the original password: 123456, the operation is as following:

Press “##” + master password + “\*\*\*”+ 005 + 123456+ 123456

Remark: The range of user number is from 001 to 199 and password is any six digits.

3. Change passwords (Master passwords and Sub-passwords)

Press “ ## ” + password being changed + “ \*\*\* ” + new password + new password

4. Delete users

Press “ ## ” + master password + “ \*## ” + 3 digits user number + 3 digits user number

5. Open the one-key opening function

Press “ ## ” + master password “ ### ” + “ ### ”

6. Cancel the one-key opening function

Press any key first. After the green light turns on, press “ ## ” + master password “ ### ” + “ ### ”

7. Set the date

Press “ ## ” + master password + “ ##\* ” + “ YearMonthDay ” + “ YearMonthDay ”

Example: If the date is October 1th, 2004,the operation is below:

“ ## ” + master password + “ ## ” + “ 041001 ” + “ 041001 ”

8. Set the time

Press “ ## ” + master password + “ ##\* ” + “ HourMinute ” + “ HourMinute ”.

Example: If the time is 14:05pm,the operation is below:

“ ## ” + master password + “ ##\* ” + “ 1405 ” + “ 1405 ”

9. Set valid time period

Press “ ## ” + master password + “ \*## ” + “ StartingTime ” + “ EndingTime ”. + “ StartingTime ” + “ EndingTime ”.

Example: If the valid time is 8:00 to 18:00 Everyday , the operation is below:

“ ## ” + master password + “ \*## ” + “ 08001800 ” + “ 08001800 ”

(Note: This Feature is only valid to all user codes. Master code can unlock 24 hours)

#### 10. Cancel valid time period

Set the **New** “ StartingTime ” and “ EndingTime ” to be same time, the system will cancel the valid time setting.

Example: Set the “ StartingTime ” and “ EndingTime ” to be 00:00 and 00:00.the Operation is below:

“ ## ” + master password + “ \*## ” + “ 00000000 ” + “ 00000000

Remark: When adding the new user, in order to conveniently delete this user later, please remember to write down this user number.